

PH;4cyl WL-T 2.5L	2006	Ford	Courier	TD	(2004-2006) AWD Cab Chassis	2500cc 86KW (Diesel)
PH;4cyl WL-T 2.5L	2006	Ford	Courier	TD	(2004-2006) AWD Ute	2500cc 86KW (Diesel)
PH;4cyl WL-T 2.5L	2006	Ford	Courier	TD	(2004-2006) RWD Cab Chassis	2500cc 86KW (Diesel)
PH;4cyl WL-T 2.5L	2006	Ford	Courier	TD	(2004-2006) RWD Ute	2500cc 86KW (Diesel)
PH;4cyl WL-T 2.5L	2005	Ford	Courier	TD	(2004-2006) AWD Cab Chassis	2500cc 86KW (Diesel)
PH;4cyl WL-T 2.5L	2005	Ford	Courier	TD	(2004-2006) AWD Ute	2500cc 86KW (Diesel)
PH;4cyl WL-T 2.5L	2005	Ford	Courier	TD	(2004-2006) RWD Cab Chassis	2500cc 86KW (Diesel)
PH;4cyl WL-T 2.5L	2005	Ford	Courier	TD	(2004-2006) RWD Ute	2500cc 86KW (Diesel)
PG;4cyl WL-T 2.5L	2004	Ford	Courier	TD	(2002-2004) AWD Cab Chassis	2500cc 86KW (Diesel)
PG;4cyl WL-T 2.5L	2004	Ford	Courier	TD	(2002-2004) AWD Ute	2500cc 86KW (Diesel)
PG;4cyl WL-T 2.5L	2004	Ford	Courier	TD	(2002-2004) RWD Cab Chassis	2500cc 86KW (Diesel)
PG;4cyl WL-T 2.5L	2004	Ford	Courier	TD	(2002-2004) RWD Ute	2500cc 86KW (Diesel)
PH;4cyl WL-T 2.5L	2004	Ford	Courier	TD	(2004-2006) AWD Cab Chassis	2500cc 86KW (Diesel)
PH;4cyl WL-T 2.5L	2004	Ford	Courier	TD	(2004-2006) AWD Ute	2500cc 86KW (Diesel)
PH;4cyl WL-T 2.5L	2004	Ford	Courier	TD	(2004-2006) RWD Cab Chassis	2500cc 86KW (Diesel)
PH;4cyl WL-T 2.5L	2004	Ford	Courier	TD	(2004-2006) RWD Ute	2500cc 86KW (Diesel)
PG;4cyl WL-T 2.5L	2003	Ford	Courier	TD	(2002-2004) AWD Cab Chassis	2500cc 86KW (Diesel)
PG;4cyl WL-T 2.5L	2003	Ford	Courier	TD	(2002-2004) AWD Ute	2500cc 86KW (Diesel)
PG;4cyl WL-T 2.5L	2003	Ford	Courier	TD	(2002-2004) RWD Cab Chassis	2500cc 86KW (Diesel)
PG;4cyl WL-T 2.5L	2003	Ford	Courier	TD	(2002-2004) RWD Ute	2500cc 86KW (Diesel)
PE;4cyl WL-T 2.5L	2002	Ford	Courier	TD	(1999-2002) AWD Cab Chassis	2500cc 86KW (Diesel)

PE;4cyl WL-T 2.5L	2002	Ford	Courier	TD	(1999-2002) AWD Ute	2500cc 86KW (Diesel)
PE;4cyl WL-T 2.5L	2002	Ford	Courier	TD	(1999-2002) RWD Cab Chassis	2500cc 86KW (Diesel)
PE;4cyl WL-T 2.5L	2002	Ford	Courier	TD	(1999-2002) RWD Ute	2500cc 86KW (Diesel)
PG;4cyl WL-T 2.5L	2002	Ford	Courier	TD	(2002-2004) AWD Cab Chassis	2500cc 86KW (Diesel)
PG;4cyl WL-T 2.5L	2002	Ford	Courier	TD	(2002-2004) AWD Ute	2500cc 86KW (Diesel)
PG;4cyl WL-T 2.5L	2002	Ford	Courier	TD	(2002-2004) RWD Cab Chassis	2500cc 86KW (Diesel)
PG;4cyl WL-T 2.5L	2002	Ford	Courier	TD	(2002-2004) RWD Ute	2500cc 86KW (Diesel)
PE;4cyl WL-T 2.5L	2001	Ford	Courier	TD	(1999-2002) AWD Cab Chassis	2500cc 86KW (Diesel)
PE;4cyl WL-T 2.5L	2001	Ford	Courier	TD	(1999-2002) AWD Ute	2500cc 86KW (Diesel)
PE;4cyl WL-T 2.5L	2001	Ford	Courier	TD	(1999-2002) RWD Cab Chassis	2500cc 86KW (Diesel)
PE;4cyl WL-T 2.5L	2001	Ford	Courier	TD	(1999-2002) RWD Ute	2500cc 86KW (Diesel)
PE;4cyl WL-T 2.5L	2000	Ford	Courier	TD	(1999-2002) AWD Cab Chassis	2500cc 86KW (Diesel)
PE;4cyl WL-T 2.5L	2000	Ford	Courier	TD	(1999-2002) AWD Ute	2500cc 86KW (Diesel)
PE;4cyl WL-T 2.5L	2000	Ford	Courier	TD	(1999-2002) RWD Cab Chassis	2500cc 86KW (Diesel)
PE;4cyl WL-T 2.5L	2000	Ford	Courier	TD	(1999-2002) RWD Ute	2500cc 86KW (Diesel)
PD;4cyl WL 2.5L	1999	Ford	Courier	D	(1996-1999) AWD Cab Chassis	2500cc 64KW (Diesel)
PD;4cyl WL 2.5L	1999	Ford	Courier	D	(1996-1999) AWD Ute	2500cc 63KW (Diesel)
PD;4cyl WL 2.5L	1999	Ford	Courier	D	(1996-1999) RWD Cab Chassis	2500cc 64KW (Diesel)
PE;4cyl WL-T 2.5L	1999	Ford	Courier	TD	(1999-2002) AWD Cab Chassis	2500cc 86KW (Diesel)
PE;4cyl WL-T 2.5L	1999	Ford	Courier	TD	(1999-2002) AWD Ute	2500cc 86KW (Diesel)
PE;4cyl WL-T 2.5L	1999	Ford	Courier	TD	(1999-2002) RWD Cab Chassis	2500cc 86KW (Diesel)

PE;4cyl WL-T 2.5L	1999	Ford	Courier	TD	(1999-2002) RWD Ute	2500cc 86KW (Diesel)
PD;4cyl WL 2.5L	1998	Ford	Courier	D	(1996-1999) AWD Cab Chassis	2500cc 64KW (Diesel)
PD;4cyl WL 2.5L	1998	Ford	Courier	D	(1996-1999) AWD Ute	2500cc 63KW (Diesel)
PD;4cyl WL 2.5L	1998	Ford	Courier	D	(1996-1999) RWD Cab Chassis	2500cc 64KW (Diesel)
PD;4cyl WL 2.5L	1998	Ford	Courier	D	(1996-1999) RWD Ute	2500cc 63KW (Diesel)
PD;4cyl WL 2.5L	1997	Ford	Courier	D	(1996-1999) AWD Cab Chassis	2500cc 64KW (Diesel)
PD;4cyl WL 2.5L	1997	Ford	Courier	D	(1996-1999) AWD Ute	2500cc 63KW (Diesel)
PD;4cyl WL 2.5L	1997	Ford	Courier	D	(1996-1999) RWD Cab Chassis	2500cc 64KW (Diesel)
PD;4cyl WL 2.5L	1997	Ford	Courier	D	(1996-1999) RWD Ute	2500cc 63KW (Diesel)
PD;4cyl WL 2.5L	1996	Ford	Courier	D	(1996-1999) AWD Cab Chassis	2500cc 64KW (Diesel)
PD;4cyl WL 2.5L	1996	Ford	Courier	D	(1996-1999) AWD Ute	2500cc 63KW (Diesel)
PD;4cyl WL 2.5L	1996	Ford	Courier	D	(1996-1999) RWD Ute	2500cc 63KW (Diesel)